



Connection Instructions for MS3000D AVR

Introduction

This regulator is the latest version of the MS3000 series of regulators and is supplied as a replacement for earlier models.


Connection notes

Provision is made for the connection of a series field resistor on F3 & F4. If an external field is not used link terminals F3 & F4.

Remove VS – SO Link if 3 phase sensing unit is used.

The link on R – RR can be replaced by an external voltage trimmer if required.

The diagram below shows the terminals of this AVR and should be used in conjunction with the wiring diagram originally supplied with the generator.

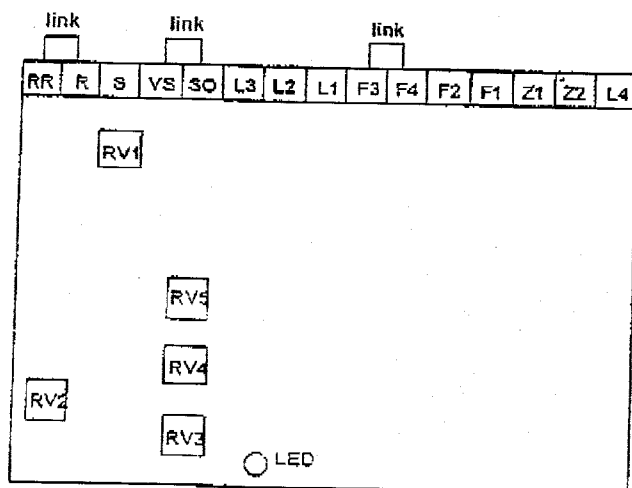

- RV1 Voltage adjustment
- RV2 Stability adjustment
- RV3 Underspeed adjustment
- RV4 Overload adjustment
- RV5 Droop adjustment
- LED Underspeed Indicator



Barnack Road • Stamford • Lincolnshire • PE9 2NB
Tel: 00 44 (0)1780 484000 • Fax: 00 44 (0)1780 484100
Website: www.newage-avkseg.com

© 2004 Newage International Limited
Reprint with permission of N.I. only.

SP_MS 333D_10.04_03_GB